RADIATOR SUPPORT UPPER BRACE (ASSY)

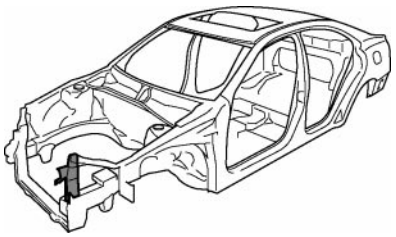

F25870A

With the radiator upper support removed.

Symbol meaning

REMOVAL	▲ ▲ : Remove Weld Points
INSTALLATION	● I : MIG Plug Weld

F25870B

REMOVAL·INSTALLATION

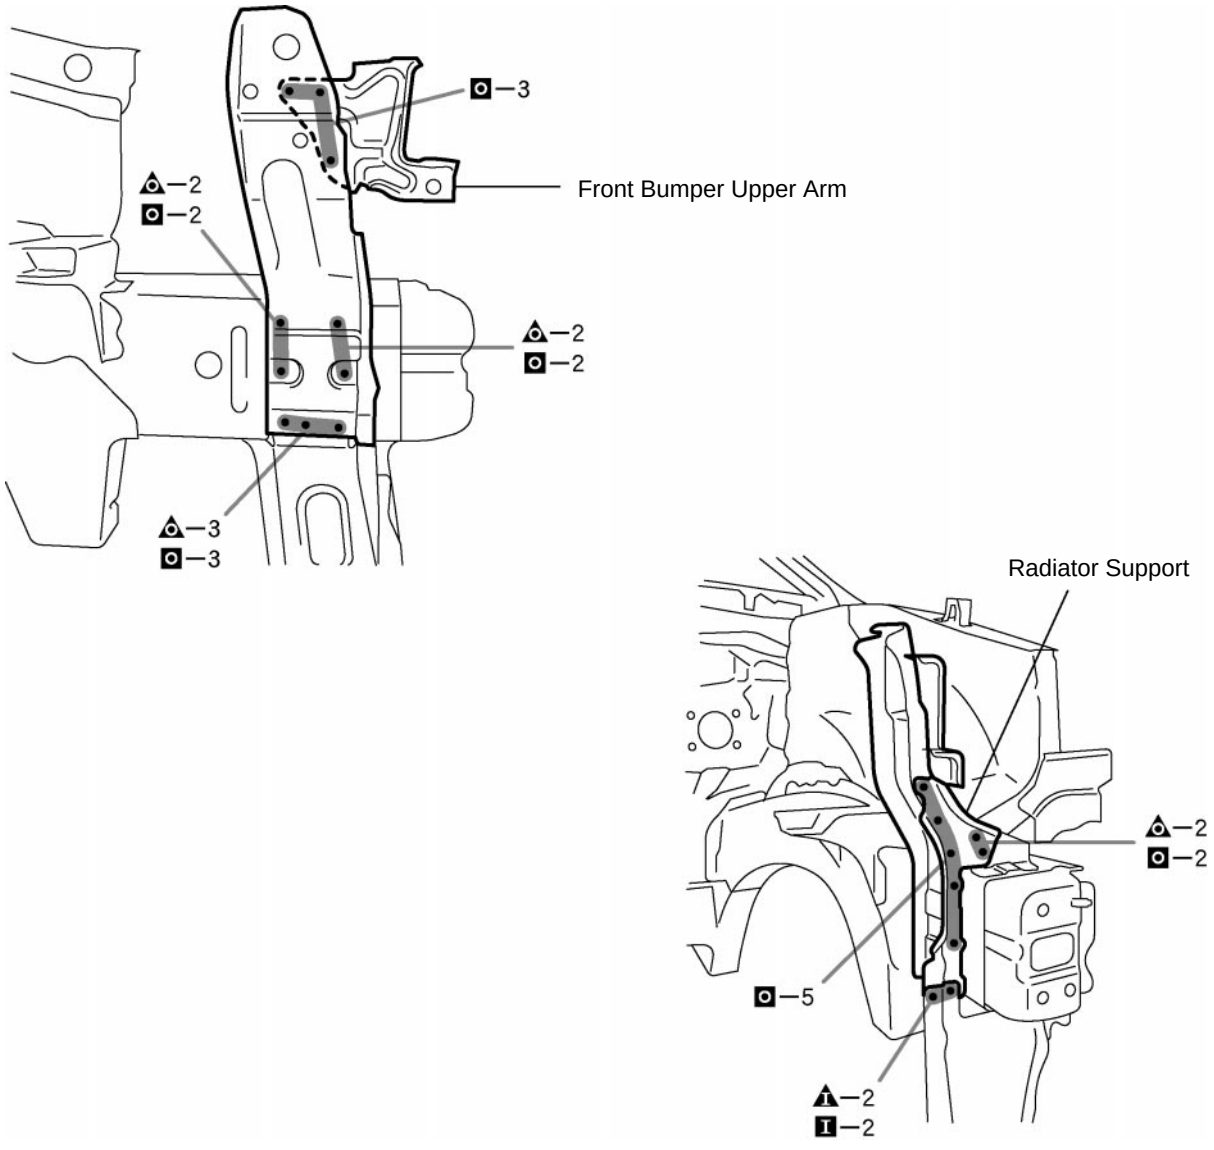

F25870

REMOVAL POINT

1 Remove the radiator support at the same time.

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.